


DUAL STAGE FILTERING DEVICE

- A two stage filtering of contaminants during injection
- Homogenization and mixing of the melt, for uniform color and temperature distribution
- Trapped contaminants remain undisturbed and are bypassed during decompression
- Decompression occurs with “zero” pressure drop

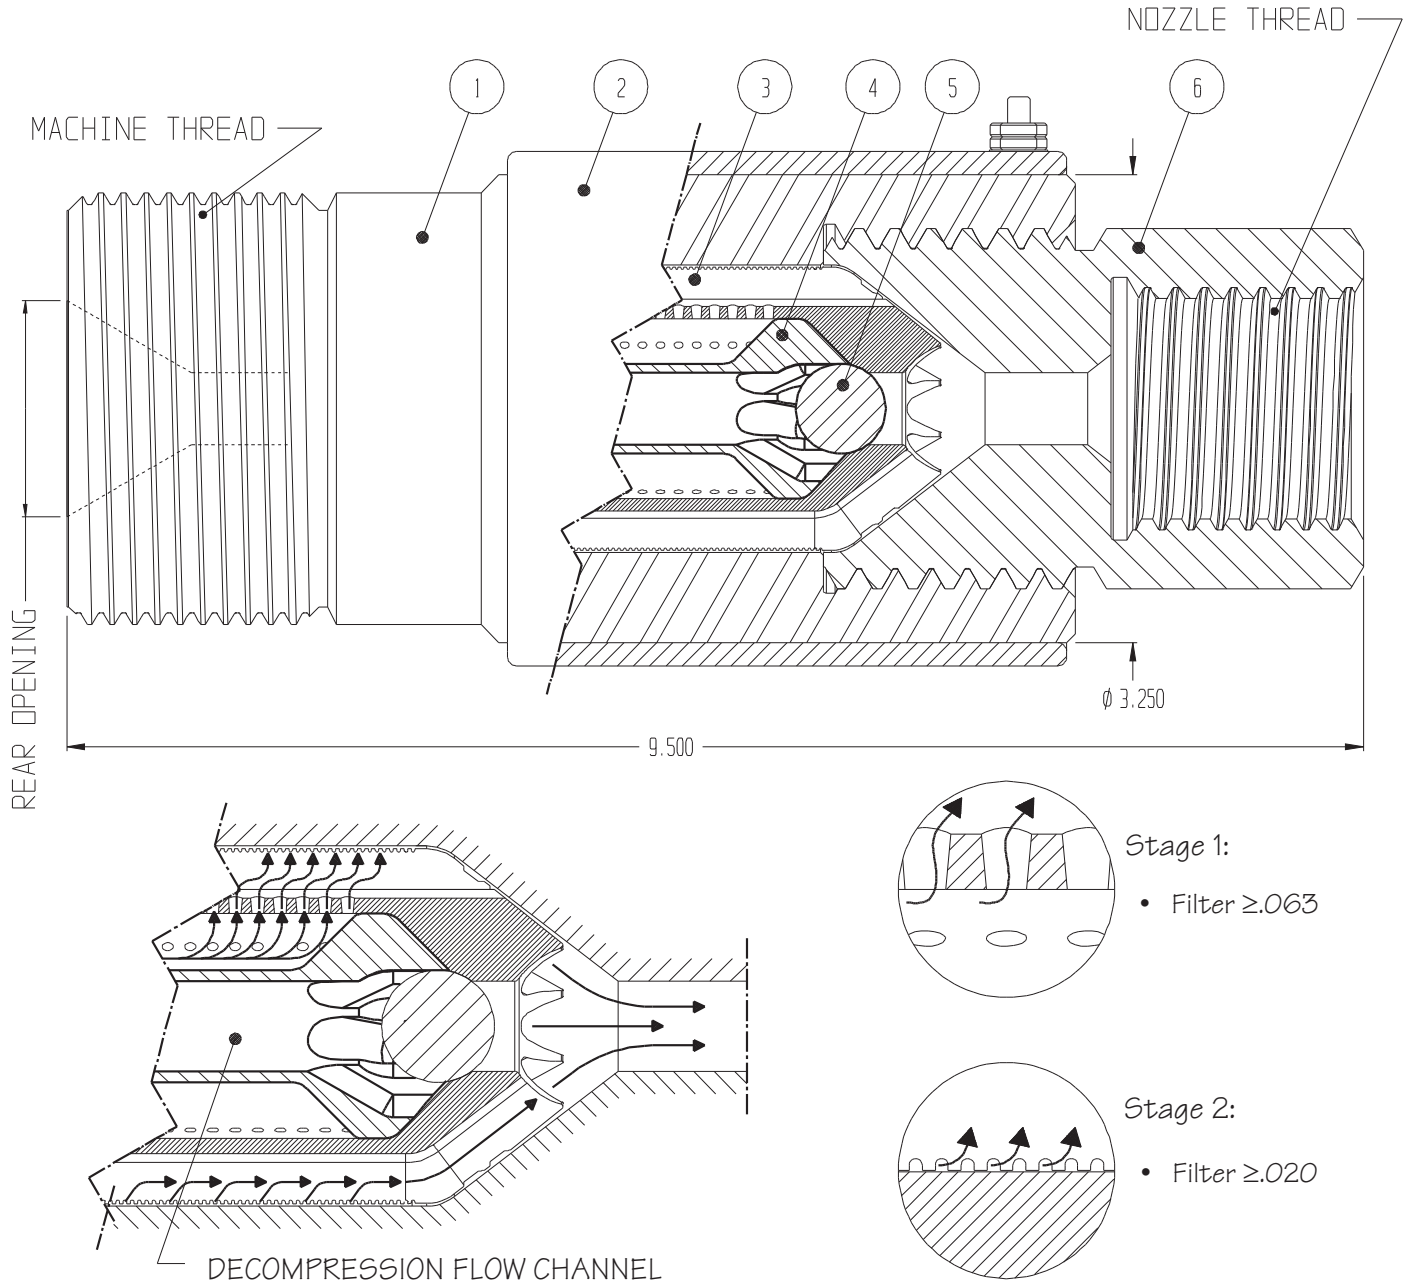

1: Body 2: Band Heater 3: Filter Core 4: Return Duct 5: Ball Check 6: Adaptor*

* Also, available with 7/8-14 Standard Thread

PART NUMBER	WATTS	VOLTS	T/C	STD. NOZZLE THREAD	MACHINE THREAD	REAR OPENING
DSF325-9.50	1800 W	240 V	NTC-12	1 1/2 X 12 OR 1 3/4 X 8	SPECIFY	SPECIFY